

Instructions For:

# Compact A-Frame



## Product Specifications

Visible Graphic: 23.5" W x 33" H

Total Graphic: 24" W x 33" H

Print on Rigid Substrate up to 1/4" thick.

Foot Print Dimensions: 25.5" W x 25" D

## Product Parts

1 - A-Frame Unit


2 - Vertical Poles

3 - Side Hinges

4 - Front & Back Hinges

5 - Top Structural Rod

6 - Top Structural Rod Screws

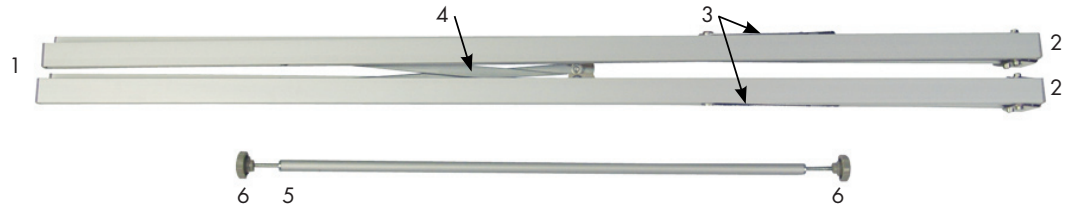



### Step 1

Take all parts out of the box.

Lay the A-Frame Unit (1) flat on the ground.


### Step 2

Pull the Vertical Poles (2) to the sides, opening the Front & Back Hinges (4). Press the Front & Back Hinges (4) into the locked position.

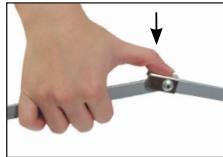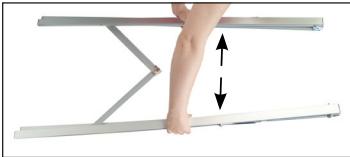

### Step 4

Holding the Vertical Poles (2) nearest to you, slide a finger between the front and back Vertical Poles (2), opening the Side Hinges (3). Press Side Hinges (3) into the locked position.

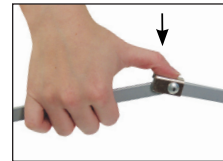

### Step 3

Remove the Top Structural Rod Screws (6) from both ends of the Top Structural Rod (5). Feed each Top Structural Rod Screw (6) through the holes at the top of the Vertical Poles (2) (notice the hinges at the tops and the feet at the bottoms of the Vertical Poles (2)). Align the Top Structural Rod (5) with the Top Structural Rod Screws (6) and screw them into place.



### Step 5

Slide the Graphic from the top into the grooves provided on the Vertical Poles (2). Repeat with the second Graphic.

